


temperature and the low temperature.

The New and Easy Way of Road Maintenance



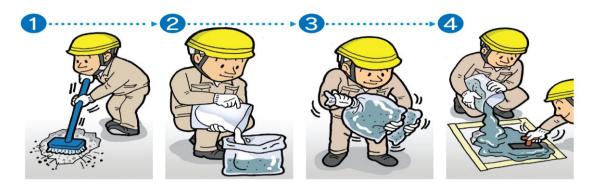

Remove dust and dirt vulnerable site with a scrub brush.

Pour mixing liquid(resin) into the plastic bag filled with powder. (Avoid using them separately) Knead them through the bag until clumping disappear.

Pour content of the bag directly to the damaged place. Then level the surface with a trowel. If you find clumping, push with a trowel.

For more details, see the manual enclosed in the package.

In case of the large quantity use, a hand mixer may be useful.

## Coverage per set(4.8 kilograms)

Thickness	2mm	5mm	10mm
Coverage area	approx. 0.9 m2	approx.0.35 m2	approx. 0.15 m2

Thickness limit is up to 15 mm.

Trowelling is necessary after pouring Cretebox P on the surface

Avoid using or preserving this product at the temperature below 0 degree celsius.

## Temperature and time required for traffic

temperature	5 degree C	10 degree C	20 degree C	30 degree C
	approx. 2hours	approx.1.5hours	approx.1hours	approx.0.5hours

the low temperature	5 degree C	10 degree C	20 degree C	30 degree C
	approx.1.5hours	approx.1hours	approx.0.5hours	_

This product can be used on the floor.